

BIFMA e3-2012 Credit: 5.9.2 & 5.9.3	EUROCOUSTIC PRODUCTS LTD.	
	PRODUCT DISASSEMBLY INSTRUCTIONS	

Disassembly Instructions:

Product Name:

Mock up 01- Workstation and Top Resting Pedestal unit




Assembled Workstation consists of partition panel, table top, Pedestal and other supporting elements. Before dismantling the partition panel, dismantle the entire load mounting components attached to it e.g.: table top, pedestal, panel etc.

Tools required: Screw driver- Flat & star.

1. Unscrew all the screws of the top supporting elements like Z bracket, two corner brackets, and the screws screwed from pedestal to table top. (Do not remove the brackets from their position).

Reviewed by		Authorized By
Management Representative	Doc. Status	Unit Head

BIFMA e3-2012 Credit: 5.9.2 & 5.9.3	EUROCOUSTIC PRODUCTS LTD. PRODUCT DISASSEMBLY INSTRUCTIONS	
---	---	---

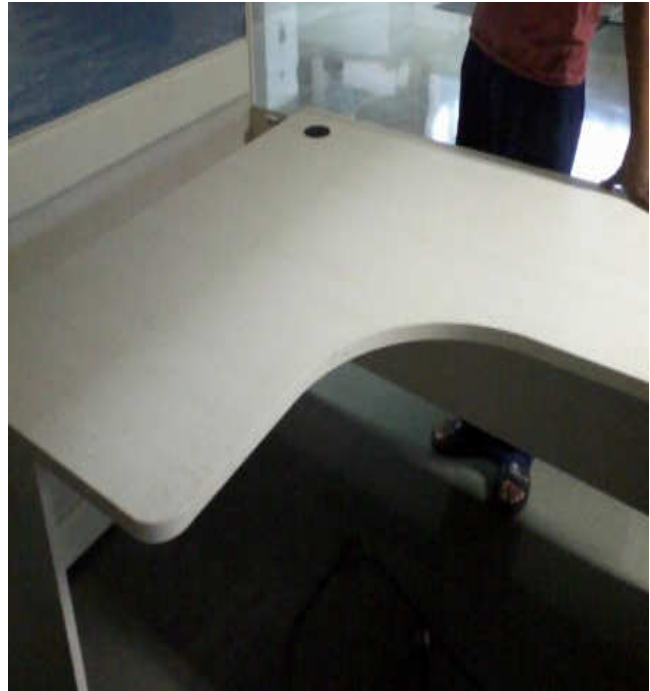

2. Remove screw from top resting support to work surface.
3. Lift the table top and separate it from the pedestal unit and panel.



4. Now remove the work surface and unscrew bracket from various position for disassembly of panel components.

Reviewed by Management Representative	Doc. Status	Authorized By Unit Head
--	--------------------	--

BIFMA e3-2012 Credit: 5.9.2 & 5.9.3	EUROCOUSTIC PRODUCTS LTD.	
	PRODUCT DISASSEMBLY INSTRUCTIONS	



5. Now unscrew minifix and remove the corner brackets and dowels.



6. Take out leg and modesty by upward sliding from A pole (Vertical) of panel system carefully.

Reviewed by		Authorized By
Management Representative	Doc. Status	Unit Head

BIFMA e3-2012 Credit: 5.9.2 & 5.9.3	EUROCOUSTIC PRODUCTS LTD.	
	PRODUCT DISASSEMBLY INSTRUCTIONS	



7. Remove Horizontal cover plate and unscrew horizontal pole from side vertical pole A.



8. Take out ICP/BCP (Aluminum Cover Plates) carefully from PVC wire bridge bracket. Unscrew and disassemble the fabric upper slab and lam lower slab.

The above procedure to be followed in reverse order for assembly.

Reviewed by		Authorized By
Management Representative	Doc. Status	Unit Head

BIFMA e3-2012 Credit: 5.9.2 & 5.9.3	EUROCOUSTIC PRODUCTS LTD.	
	PRODUCT DISASSEMBLY INSTRUCTIONS	

Product Name:
Mock up 02- Free Standing Table with Pedestal unit



Assembled FST unit consists of Pedestal and other supporting elements. Before dismantling the FST unit, dismantle the entire load mounting components attached to it e.g.: table top, pedestal, etc.



Reviewed by		Authorized By
Management Representative	Doc. Status	Unit Head

BIFMA e3-2012 Credit: 5.9.2 & 5.9.3	EUROCOUSTIC PRODUCTS LTD.	
	PRODUCT DISASSEMBLY INSTRUCTIONS	

1. Take out pedestal unit and remove supporting element like minifix, dowels etc.



2. Now remove table top carefully which connect leg to top by minifix and dowels.



3. Now unscrew minifix from leg connecting to modesty. Then pull gently the connecting dowels to separate leg from modesty.

Reviewed by		Authorized By
Management Representative	Doc. Status	Unit Head

BIFMA e3-2012 Credit: 5.9.2 & 5.9.3	EUROCOUSTIC PRODUCTS LTD.	
	PRODUCT DISASSEMBLY INSTRUCTIONS	



4. Now pull out all three drawers carefully by unlocking the slide locks.



5. Remove screw from slides. Separate pedestal top, sides and skirting carefully which are connected with dowels and minifix.

The above procedure to be followed in reverse order for assembly.

Reviewed by		Authorized By
Management Representative	Doc. Status	Unit Head

BIFMA e3-2012 Credit: 5.9.2 & 5.9.3	EUROCOUSTIC PRODUCTS LTD.	
	PRODUCT DISASSEMBLY INSTRUCTIONS	

Product Name:
Mock up 03- Round Table Dia. 1200 mm



Assembled Round table unit consists of table top rested on x type with radius leg and other supporting elements. Before dismantling the Round table unit, dismantle the entire load mounting components attached to it e.g.: table top, X type leg etc.

Reviewed by		Authorized By
Management Representative	Doc. Status	Unit Head

BIFMA e3-2012 Credit: 5.9.2 & 5.9.3	EUROCOUSTIC PRODUCTS LTD.	
	PRODUCT DISASSEMBLY INSTRUCTIONS	



1. First unscrew two corner brackets and take out the top carefully.



2. After removing table top pull cross leg at upward direction carefully to separate one from another.

The above procedure to be followed in reverse order for assembly.

Reviewed by		Authorized By
Management Representative	Doc. Status	Unit Head

BIFMA e3-2012 Credit: 5.9.2 & 5.9.3	EUROCOUSTIC PRODUCTS LTD.	
	PRODUCT DISASSEMBLY INSTRUCTIONS	

Product Name:

Mock up 04- Storage unit (HDU) 1200 mm x 1200 mm x 450 mm



Assembled Storage unit consists of storage top, side, back, skirting, shelf, centre partition and other supporting elements. Before dismantling the storage unit, dismantle the entire load mounting components attached to it e.g.: storage top, sides etc.

Reviewed by		Authorized By
Management Representative	Doc. Status	Unit Head

BIFMA e3-2012 Credit: 5.9.2 & 5.9.3	EUROCOUSTIC PRODUCTS LTD.	
	PRODUCT DISASSEMBLY INSTRUCTIONS	



1. First Open the doors and unscrew hinges to separate the door from the side of the storage.



2. Now take out the door carefully from overlap hinge.

Reviewed by		Authorized By
Management Representative	Doc. Status	Unit Head

BIFMA e3-2012 Credit: 5.9.2 & 5.9.3	EUROCOUSTIC PRODUCTS LTD.	
	PRODUCT DISASSEMBLY INSTRUCTIONS	



3. Now take out all shelves from shelf support pin and then unscrew minifix which connects top to side and top to bottom.



4. Now takeout storage top carefully from the dowel and minifix by gently upward pull force. Then pull the back at upward direction and takeout it.

Reviewed by		Authorized By
Management Representative	Doc. Status	Unit Head

BIFMA e3-2012 Credit: 5.9.2 & 5.9.3	EUROCOUSTIC PRODUCTS LTD.	
	PRODUCT DISASSEMBLY INSTRUCTIONS	



5. Now takeout centre partition by gentle upward pull with care to remove from dowels.
6. Thereafter tilt remain portion of storage side and bottom to unscrew the minifix.



7. Remove two sides by unlocking the minifix and gentle pull to separate it from remain part. Thereafter remove skirting and bottom portion carefully.

The above procedure to be followed in reverse order for assembly.

Reviewed by		Authorized By
Management Representative	Doc. Status	Unit Head